



B21

E2

E69



OIL SWITCHING
SOLENOID VALVE RH

B137

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17				
18	19	20	21	22	23	24
25	26	27		28	29	30
31						

B21

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33
34	35	36	37	38	39	40	41			
42	43	44	45	46	47					
48	49	50	51	52	53	54				

E69

1	2
---	---