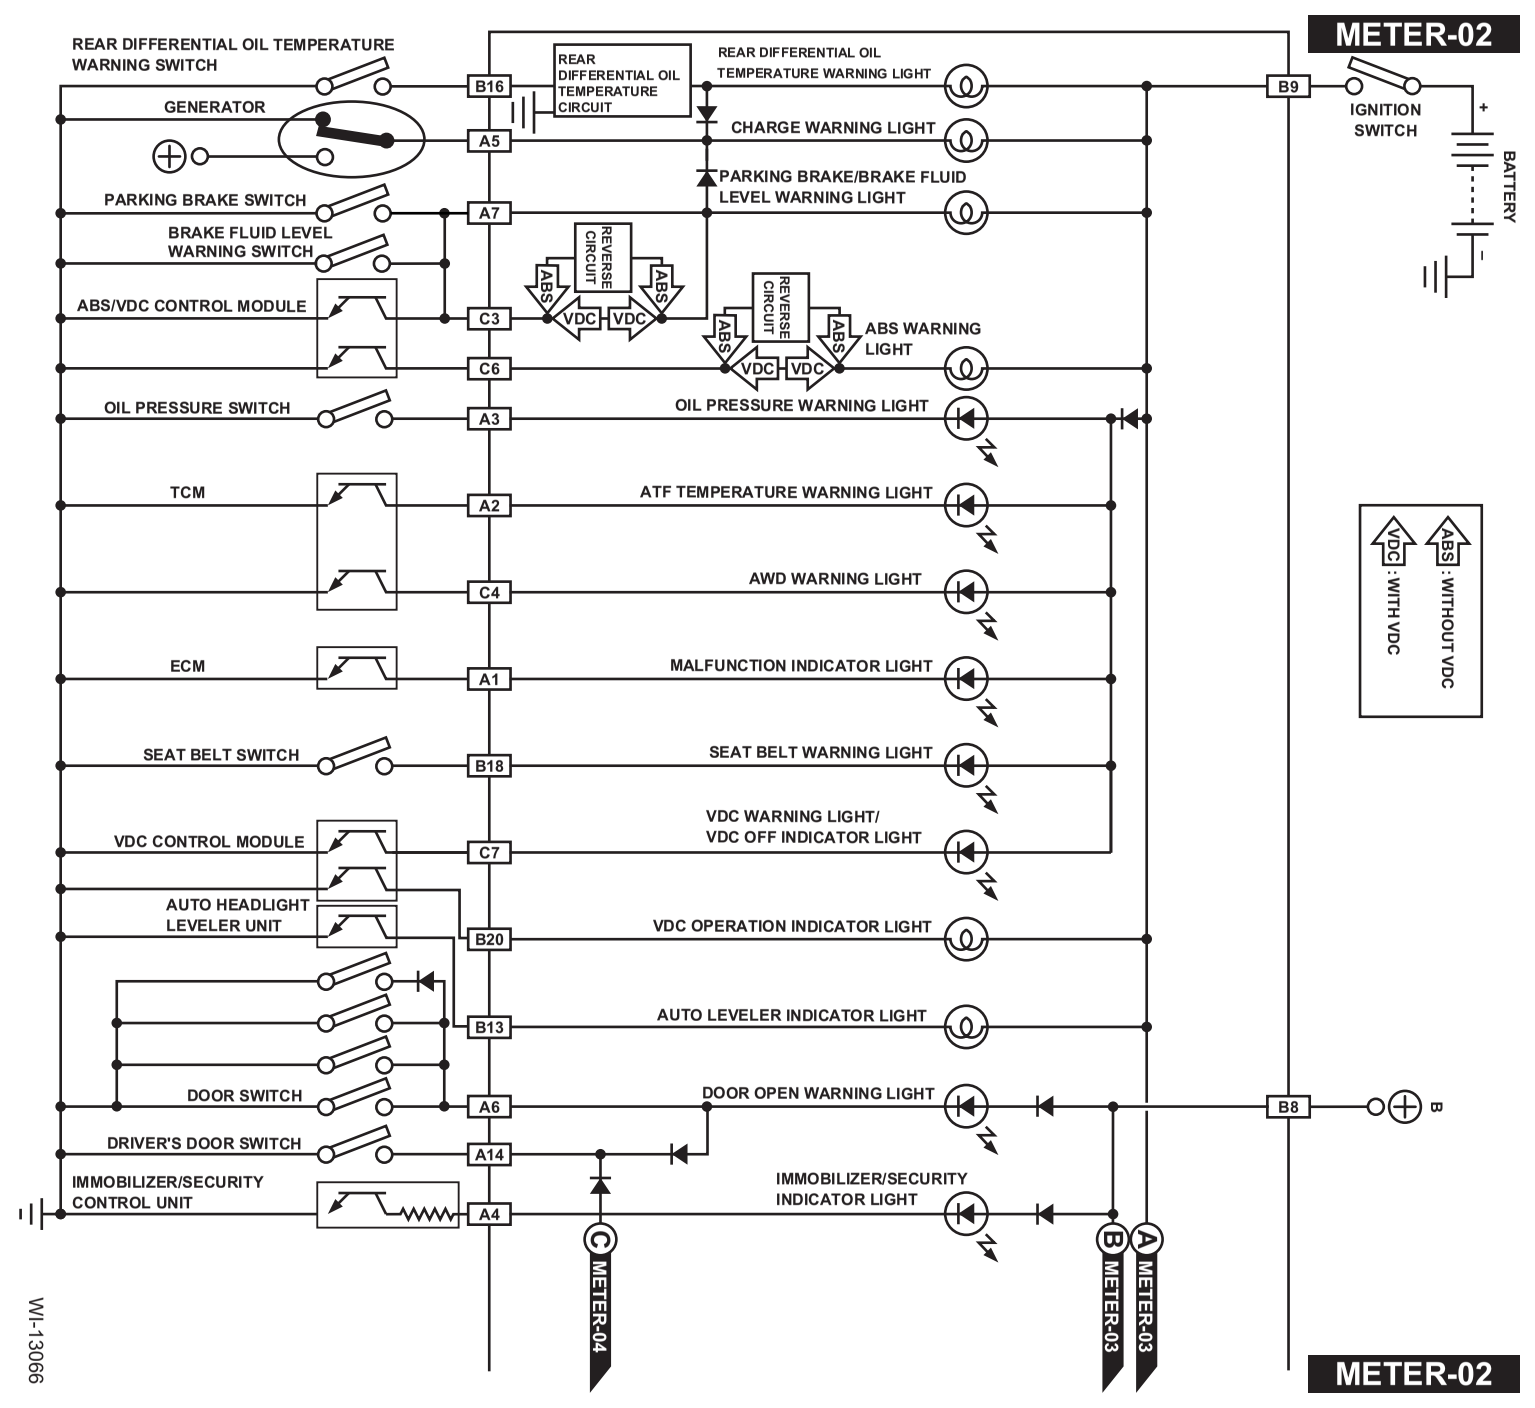
REAR DIFFERENTIAL OIL TEMPERATURE WARNING SWITCH
GENERATOR
PARKING BRAKE SWITCH
BRAKE FLUID LEVEL WARNING SWITCH
ABS/VDC CONTROL MODULE
OIL PRESSURE SWITCH
TCM
ECM
SEAT BELT SWITCH
VDC CONTROL MODULE
AUTO HEADLIGHT LEVELER UNIT
DOOR SWITCH
DRIVER'S DOOR SWITCH
IMMOBILIZER/SECURITY CONTROL UNIT
B16
A5
A7
C3
C6
A3
A2
C4
A1
B18
C7
B20
B13
A6
A14
A4
REAR DIFFERENTIAL OIL TEMPERATURE CIRCUIT
REVERSE CIRCUIT
ABS
VDC
REAR DIFFERENTIAL OIL TEMPERATURE WARNING LIGHT
CHARGE WARNING LIGHT
PARKING BRAKE/BRAKE FLUID LEVEL WARNING LIGHT
ABS WARNING LIGHT
OIL PRESSURE WARNING LIGHT
ATF TEMPERATURE WARNING LIGHT
AWD WARNING LIGHT
MALFUNCTION INDICATOR LIGHT
SEAT BELT WARNING LIGHT
VDC WARNING LIGHT/ VDC OFF INDICATOR LIGHT
VDC OPERATION INDICATOR LIGHT
AUTO LEVELER INDICATOR LIGHT
DOOR OPEN WARNING LIGHT
IMMOBILIZER/SECURITY INDICATOR LIGHT
B9
IGNITION SWITCH
BATTERY
+
-
B8
B
VDC : WITH VDC
ABS : WITHOUT VDC
C METER-04
B METER-03
A METER-03